



# QUICK CONNECT™


## START COLLAR

### INSTALLATION INSTRUCTIONS

Place front of collar (side opposite gasket and tabs) in position against trunk line and trace collar with marker. Cut hole.



**1** Insert Quick Zips: Zips insert in gasket side of Start Collar with triangular head pointing outwards. Do not insert more than 1/4" to 1/2". Peel off gasket release paper.

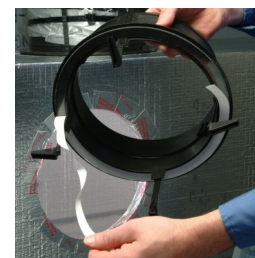

**2** Insert Collar: Slightly push in heads of Quick Zips to fit into pre-cut hole in duct board or sheet metal trunk line. Push collar against trunk line surface. Once pressed in place the adhesive gasket will adhere to surface.



**3** Pull Quick Zips Tight: Pull each Quick Zip tight by bracing base of palm on collar edge and pulling to lock collar in place. The Start Collar is universal and will seal tight to sheet metal, up to 2" duct board or insulated duct. If sheet metal is used, a standard zip screw can also be used to secure using the 4 predrilled holes in the Start Collar's outside flange.



MADE IN USA

#### Save More Time

**PRE-INSTALL FLEX DUCT:** If using flex duct you can pre- attach your Start Collar to the inner core of the flex duct using cable tie and foil tape. Follow the install directions above to attach collar run to the trunk line then secure the flex duct insulation jacket up over collar using a cable tie.

